

P/N : 03.02.762

VARIABLE COAXIAL ATTENUATOR

31,5 dB - 100MHz-40GHz - USB/MANUAL


COMPONENTS

NEW





SPECIFICATIONS	
Bande de fréquence / <i>Frequency bandwidth</i>	100MHz-40GHz
Dynamique d'atténuation / <i>Attenuation range</i>	31,5 dB
Pas d'atténuation / <i>Attenuation step</i>	0,5 dB
Vitesse changement / <i>Attenuation change speed</i>	100 ns (RF, excl. control latency)
Connecteurs RF / <i>RF Connectors</i>	2,4mm female (x 2)
Puissance max / <i>Max input power</i>	In : +24 dBm / Out : +15dBm
Impédance / <i>Impedance</i>	50 Ohms
TOS entrée / <i>Input VSWR</i>	<2:1 @ 40GHz
Pertes d'insertion / <i>Insertion loss</i>	5,2 dB typ @ 40 GHz
Contrôle / <i>Control</i>	Manual / USB / Software
Interface de contrôle / <i>Control interface</i>	Micro USB
Alimentation / <i>Power supply</i>	5V / 40mA, via USB
Affichage / <i>Display</i>	OLED

DIMENSIONS - For reference only

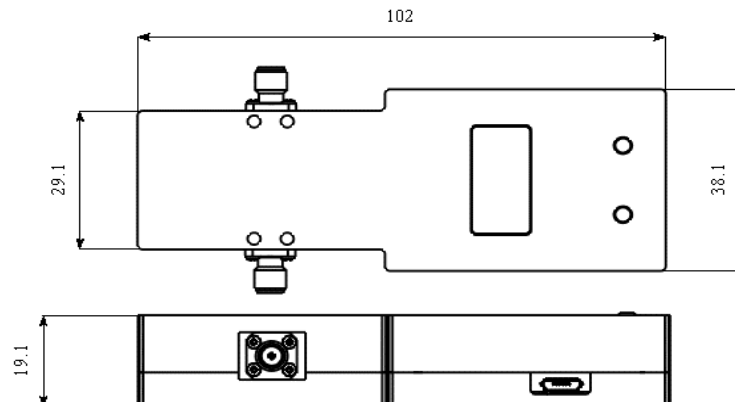

P/N : 03.02.762

VSWR

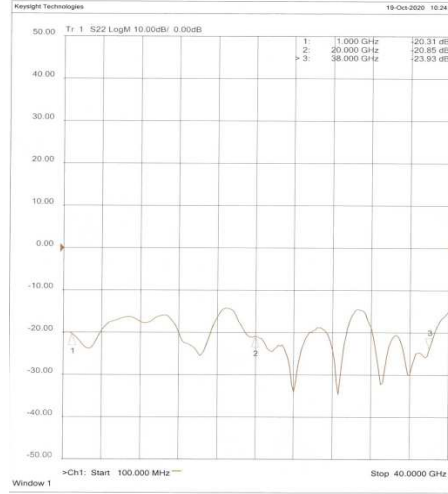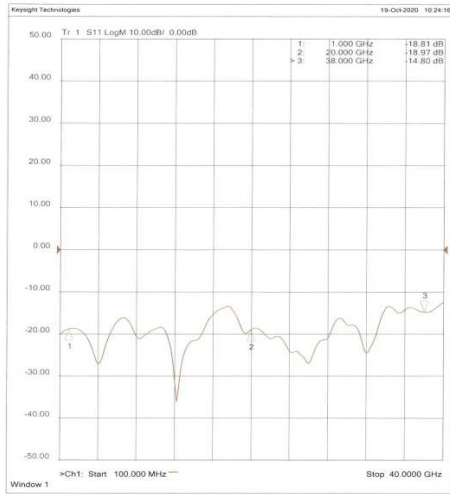


INSERTION LOSS

0dB attenuation



@ 31,5dB attenuation

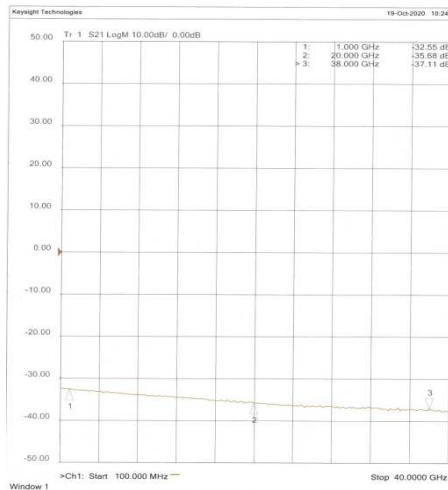

USING SOFTWARE

Easy to use, our USB software can use sequence file to launch automatic attenuation versus time.
 You can use Basic commands to control attenuation direction and to see graph.
 Please refer to our free software help file on our download website.

